Included In Your Kit

Tools, Components, & Connectors

5MM ALLEN-T x1

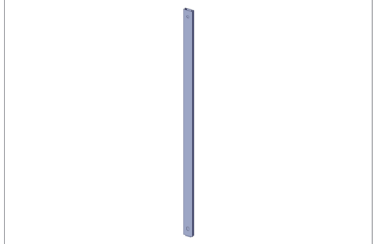

PH-1155-L1-S x2



PHFC2-900-L-L x2

PHFC2-900-L1-L x4

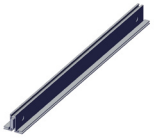

PHFC2-600-L-L x4



PMFC2-90-1193-L1-L1 x6

PHFC2-1155-L1-L x4

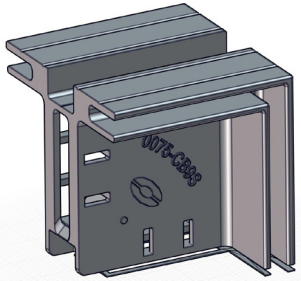

CB9-S x4

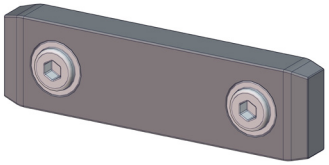

IB2 x8

LUM-200-ORL x3

Graphics

VF-03-A-G-1 x1

VF-03-B-G-1 x1

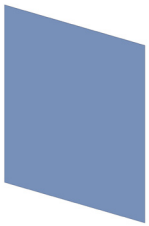

VF-03-C-G-1 x1

VF-03-D-G-1 x1

Exploded View

VF-K-03
SECTION 1

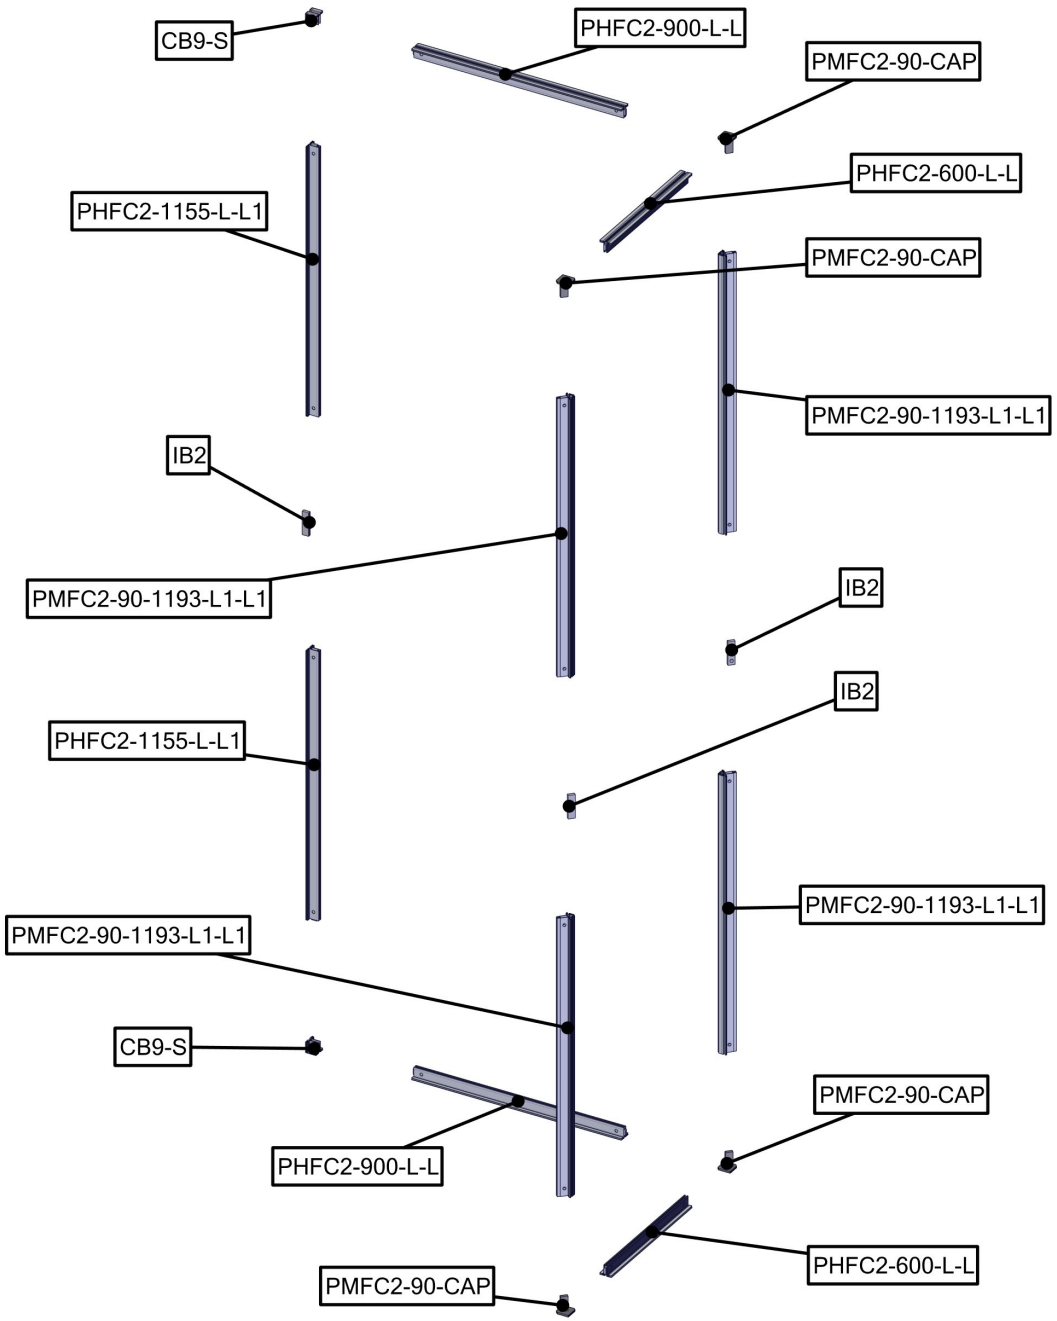

Exploded View

VF-K-03
SECTION 2

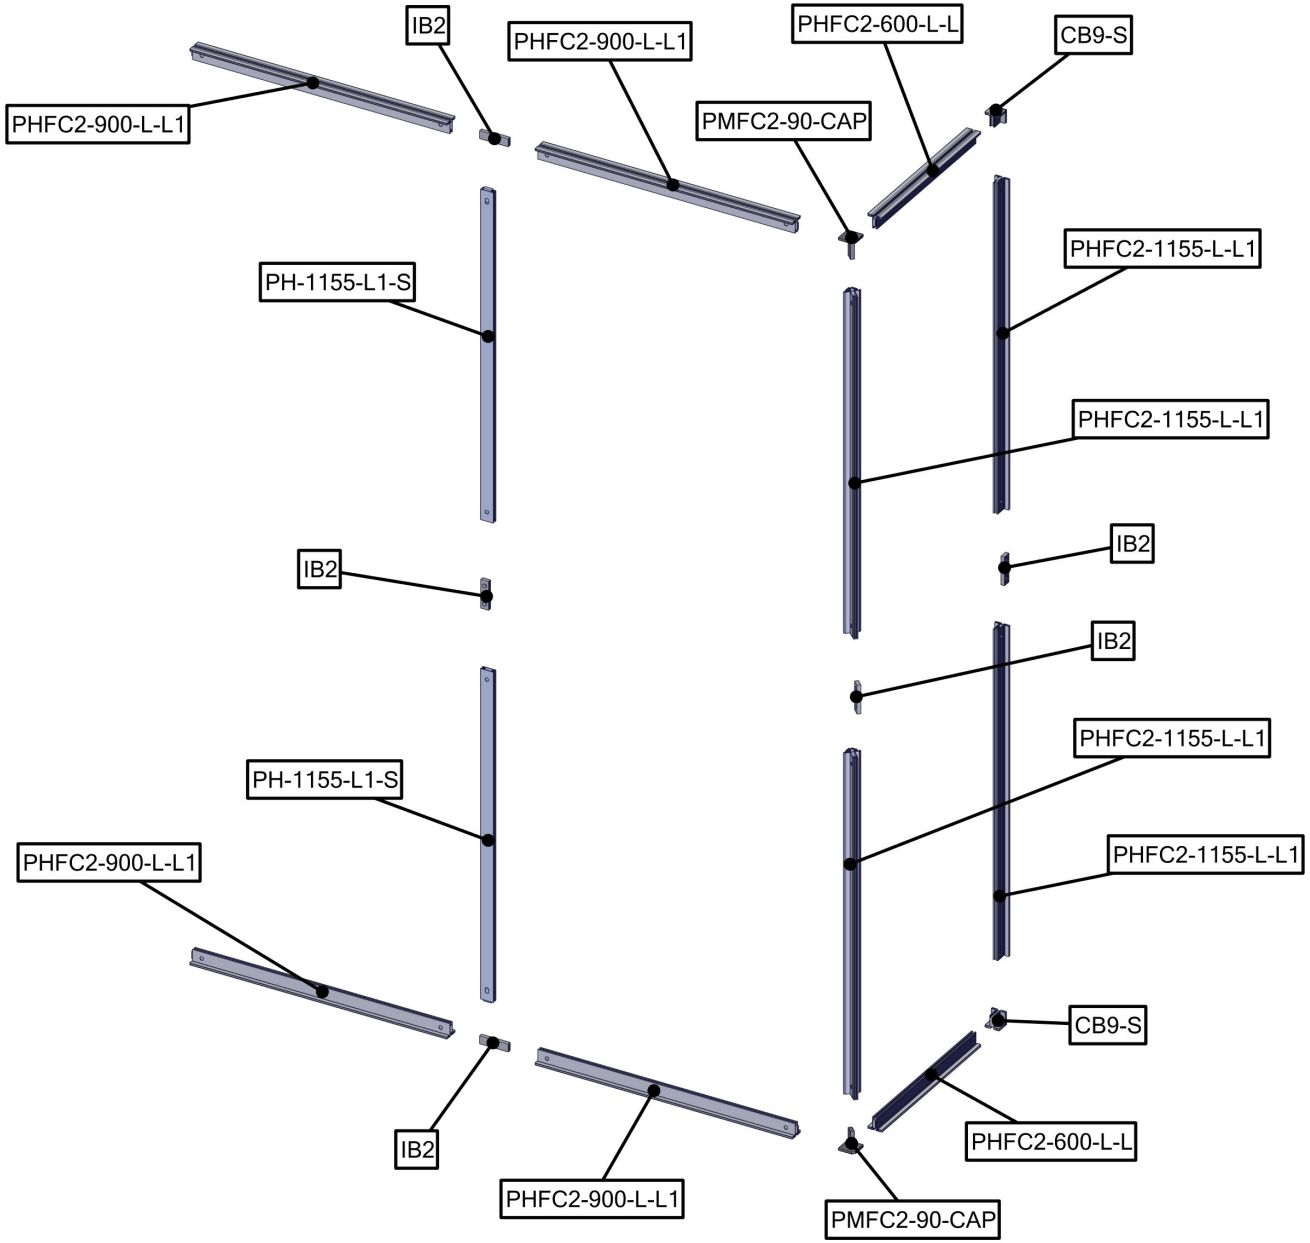

Kit Assembly

Step by Step

Step 1.

Gather the components to build the first section. Use the Exploded View for part labels.

Reference Connection Method(s) 1, 2 and 3 for more details.



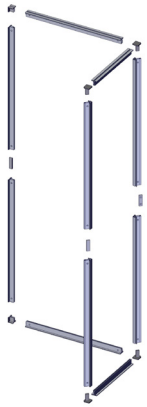

Step 2.

Build the second section of the frame and attach it to the first half when completed.

Reference Connection Method(s) 1, 2 and 3 for more details.

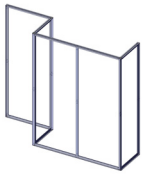

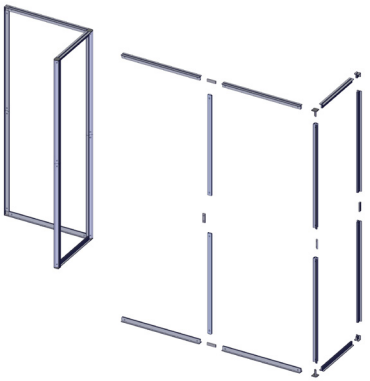

Step 3.

Apply the four graphics to the frame.

Reference Connection Method 5 for more details.

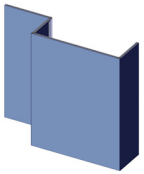

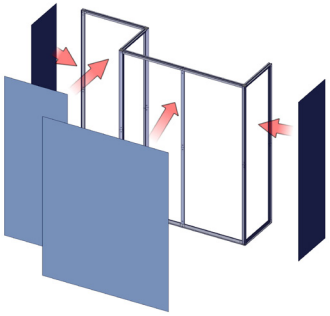

Step 4.

Clip the lights to the top of the frame.

Reference Connection Method 4 for more details.

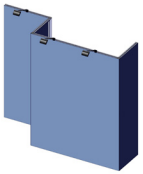

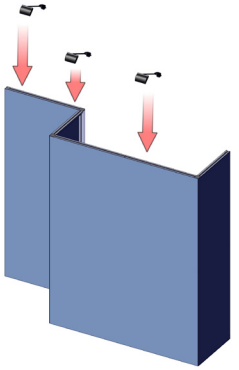

Connection Methods

Connection Method 1: IB2

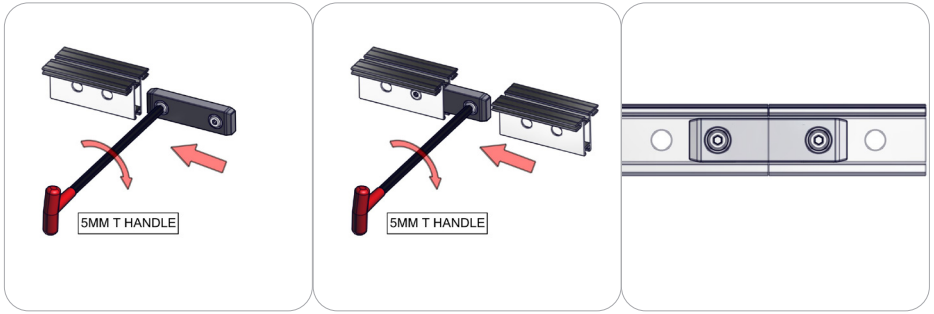

First, insert the in-line connector into the extrusion while holding in the lock button. Then, slide the next extrusion onto the same in-line connector again holding in the lock button. Finally, use the provided allen key to lock the in-line connector in place. Use the allen key tool to turn the lock buttons, make quarter turns and do not over tighten the lock buttons.

Connection Method 2: PHFC2

First, with the cam lock disengaged, place the cam lock teeth into the extrusion channel. Second, use the allen key tool to lock it in place. Make half turns clock-wise to engage the cam lock. Do not over tighten the lock buttons.

Connection Method 3: CB9-R / CB9-S

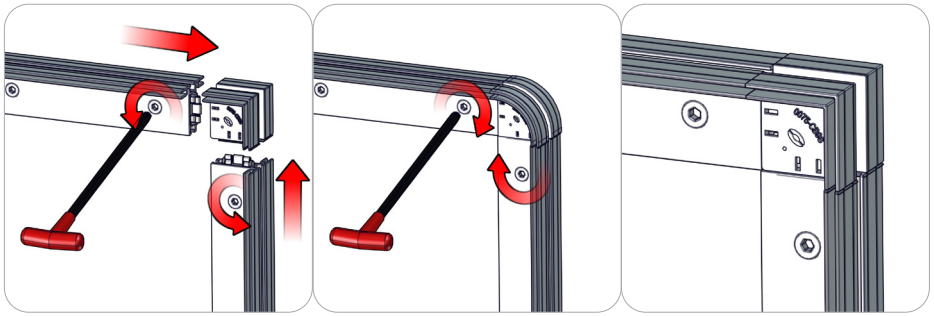

First, make sure the cam lock button is unlocked. Second, insert the cam lock teeth in to corner bracket channel. Third, tighten the cam lock button. Use the allen key tool to turn the lock buttons, make quarter turns and do not over tighten the lock buttons. Repeat for opposite end.

Connection Method 4: LUM-200

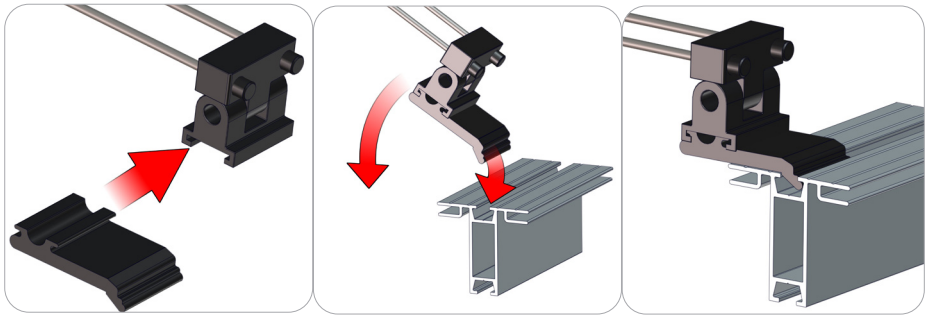

First, slide the light clip into the dove tail end of the spot light. Second, rest the light clip into the extrusion channel. Make adjustments to the spot light if necessary.

Connection Methods

Connection Method 5: Graphic Application

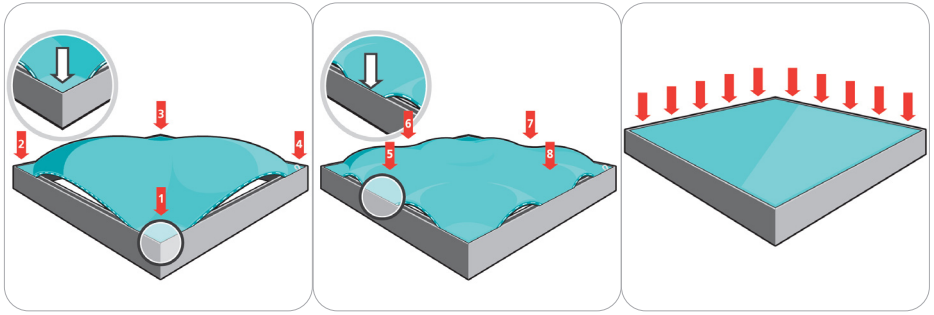

First, insert the silicone edge frame corners into the frame graphic channel (points 1 through 4).
Second, insert the silicone edge frame sides into the frame graphic channel (points 5 through 8).
Third, push the remaining silicone edge fabric into the frame graphic channel.
Similar setup is recommended for the opaque liner.
To remove these panels, simply pull the loop tag sewn near a corner.